

Illuminated Cup Holders

2012-2014 Toyota Camry

Thanks for purchasing this Cup Holder Illumination Install Kit! If you have any questions or feedback please email us direct at info@AccentGlowLED.com

Read these instructions completely before beginning installation

AccentGlowLED,LLC. does not assume responsibility and disclaims liability for damage, loss, or expense arising from improper use, operation, or installation of this product.


Color instructions and Installation video available at AccentGlowLED.com/instructions

You may need the following tools:



- Plastic panel popper tool (Harbor Freight #67021)
- Small Flathead Screwdriver
- 3/16" Drill Bit (or larger)
- Razor Blade
- Wire Strippers (product similar to Irwin 2078300 is used) or other wire attachment method
- Electrical Tape

Disassembly:

-Engage the parking brake. Use your hands or a plastic panel tool to pull off each side of the center console (highlighted in A). These pieces will pull straight back towards the rear of the car (A2) (use two hands). Use a small flathead screwdriver to pop up the shift lock cover (B) then use flat head screw driver to press down into hole and shift car into neutral (N). Unscrew shifter handle counter-clockwise (C).

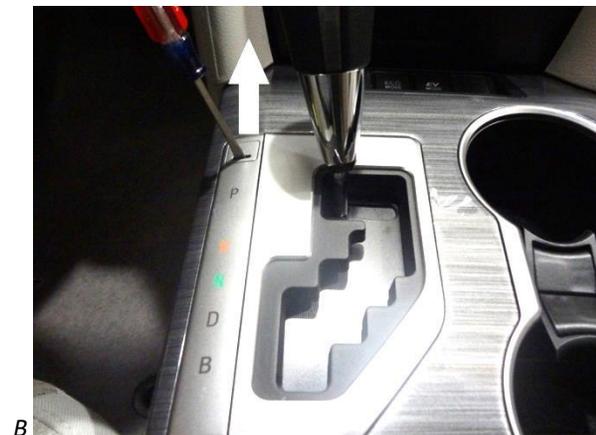

-Make sure the pocket in front of the shifter is open. The entire center piece (highlighted in D) pops upwards. Start with rear part (D1) and then pop up the front portion. You should be able to grip sides and lift up with your hands. Unplug shift indicator lights (E) EV and ECO mode buttons if applicable (F) and seat heater buttons if applicable (not pictured). Remove center console trim from vehicle (G).

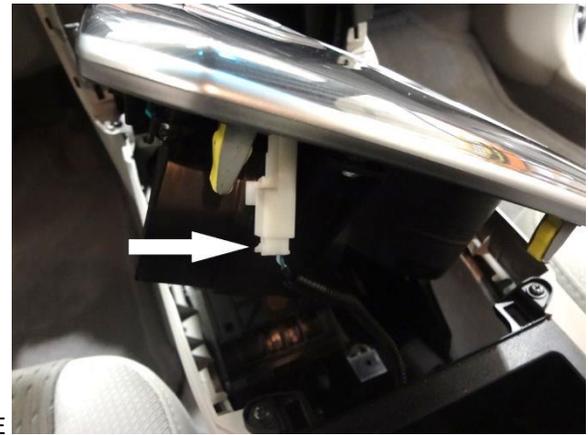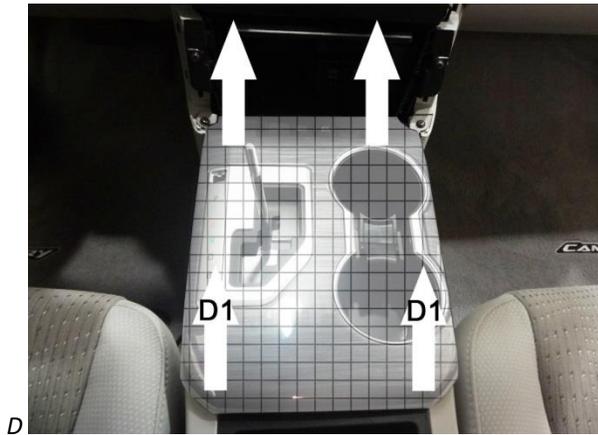

Installation:


-Remove the cup holder divider if applicable. Thoroughly clean inside each cup holder with an alcohol pad or Windex (this step is important for quality of adherent). Drill a 3/16" hole from the top of the center console slightly off center in each cup holder (H). Now run your wires through the holes starting at the top and remove the covering from the double-sided tape on the back of each cupholder disc (I). Center each disc and then press down firmly to secure each disc (do not remove disc once firmly pushed down) (J).





J


-Place the center console upside down on driver's seat (K). We need to run the wires to the shift indicator lights plug (L) and the other shifter plug (M) (alternate locations for (-) ground can be used, see below). Cut back with a razor blade the tape and tubing covering the shift indicator light wiring (N). We need to attach the RED LED wires (+) to the GREEN car wire (+) (N).

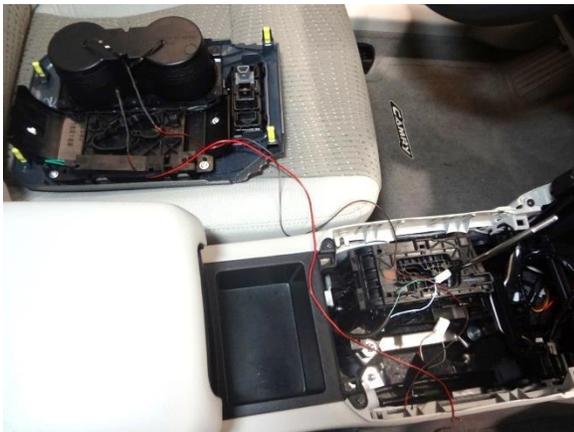


K



L

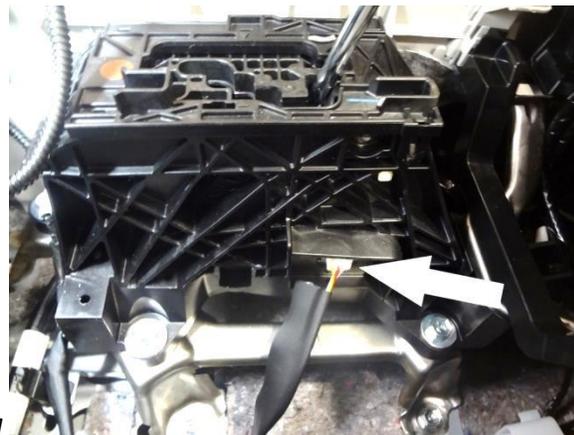


M

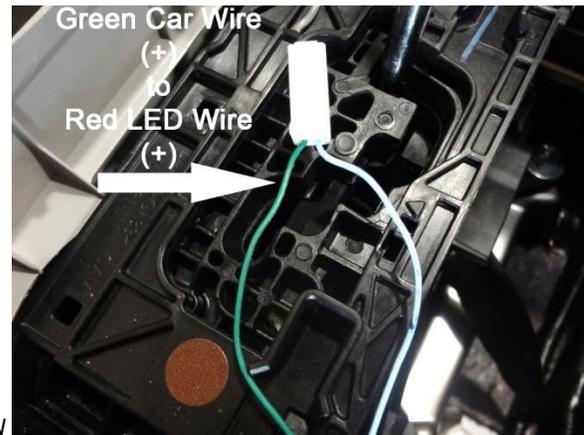


N


-Strip back the GREEN car wire (O). Poke a hole in the center of the wire (P). Twist both RED LED wires together (Q) and run them through the center of the car wire and twist around (R). Tape up connection with electrical tape and then secure with zip ties (S).

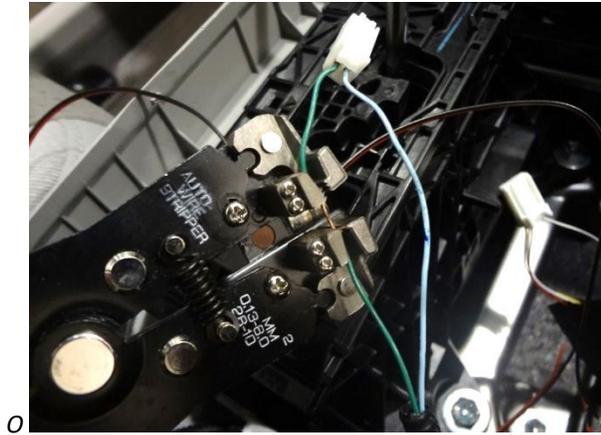


O

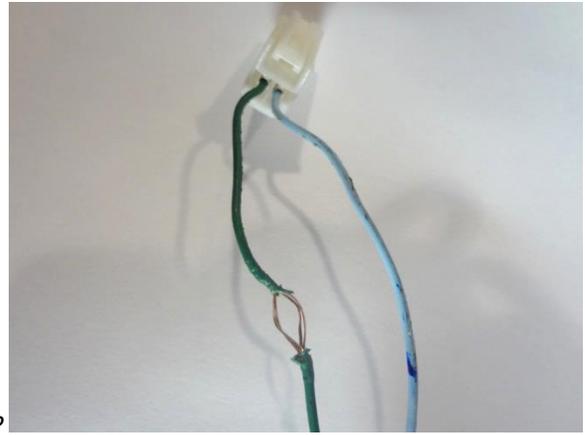


P

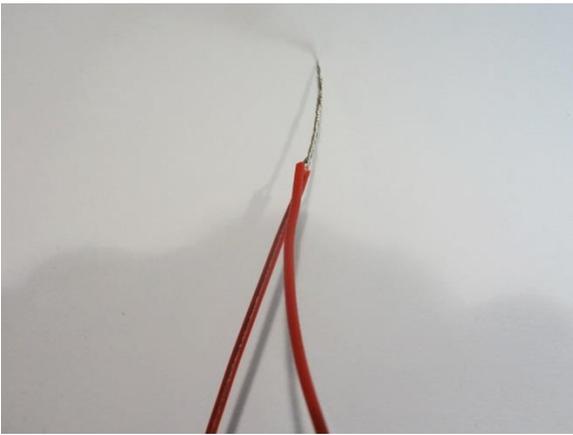

Q


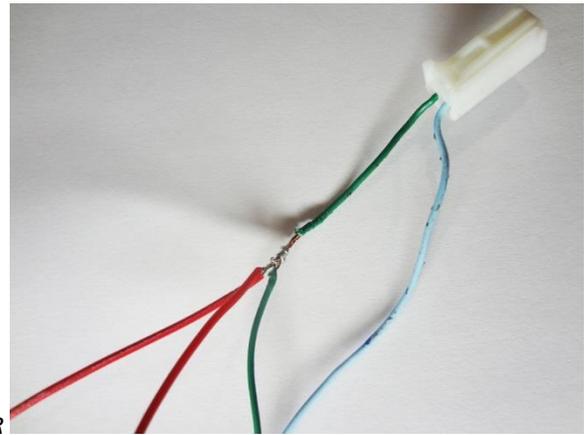


R

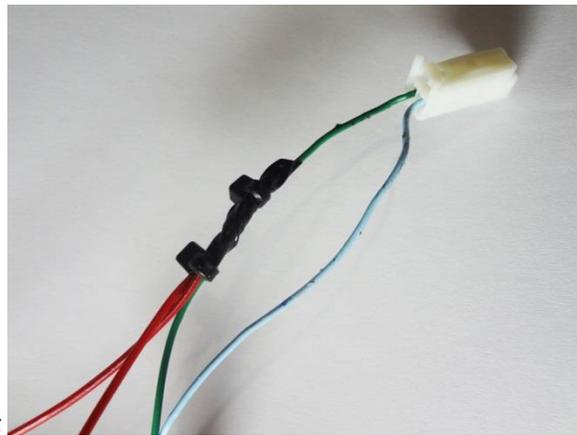

S

-Next we need to run the BLACK LED wires (-) to the WHITE/BLACK wire (-) on the other shifter plug (T- from step M) (alternatively you can use a ring terminal on the bolt to the right of the shifter (not pictured)). Perform the same process as before, attaching the BLACK LED wires (-) to the WHITE/BLACK car wire (-). Ensure all connections are taped and zip tied. Take the remaining wire slack and bundle together and zip tie out of the way (V) (DISCLAIMER: A 1-3amp fuse is suggested in line with the red LED wires).

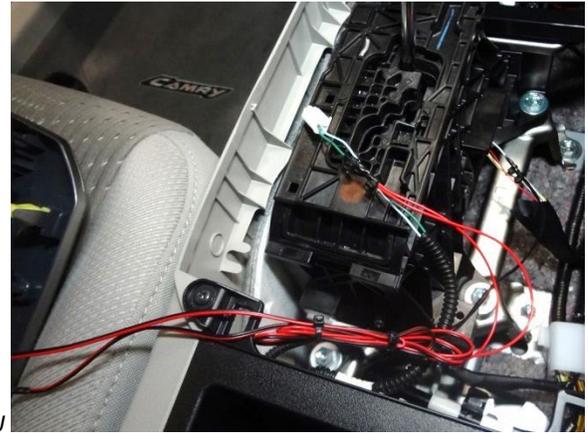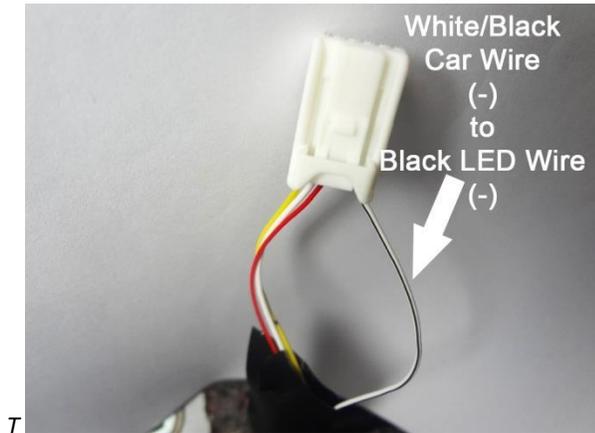

-You're all done! Turn on your headlights to test the LEDs. Put everything back together, **remembering to plug back in all plugs**. The remainder of the reinstall is the opposite of uninstall!



Please contact us directly if you have any installation questions or comments about the product. Thank you!

©AccentGlowLED™ 2016