

ACCENTGLOWLED[®].com

Illuminated Cup Holders

2012-2016 Hyundai Veloster (All Trims; Base, Turbo, Manual)

Thanks for purchasing this Cup Holder Illumination Install Kit! If you have any questions or feedback please email us direct at info@AccentGlowLED.com

Read these instructions completely before beginning installation

AccentGlowLED,LLC. does not assume responsibility and disclaims liability for damage, loss, or expense arising from improper use, operation, or installation of this product.



Color instructions available at AccentGlowLED.com/instructions

You may need the following tools:


- Plastic panel popper tool (Harbor Freight #67021)
- Small Flathead Screwdriver
- 3/16" Drill Bit (or larger)
- Razor Blade
- Wire Strippers (product similar to the Irwin 2078300 is used) or other wire attachment method
- Electrical Tape

Disassembly:

-Engage the parking brake and use a small flathead screwdriver or plastic panel tool to pop up the cover underneath the parking brake (A). If automatic transmission, pop out small shift lock cover (B) and shift to neutral. If manual, use a panel tool or your hands to carefully unclip the gear shift boot (pull upwards). Next we will pop off the entire center console (highlighted in C) the whole panel pulls upwards and is easiest to start by opening the center armrest and pulling upwards there with your hands or plastic pry tool (D), work your way forwards.

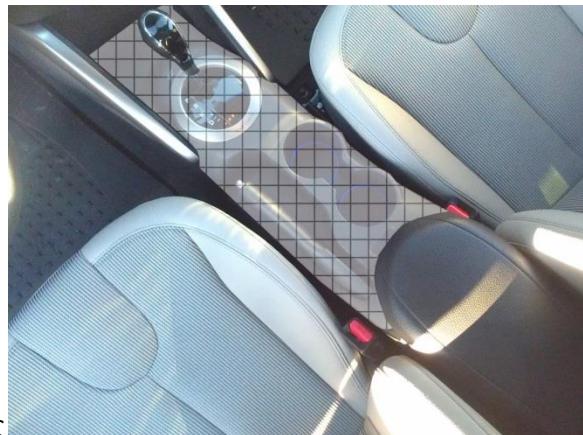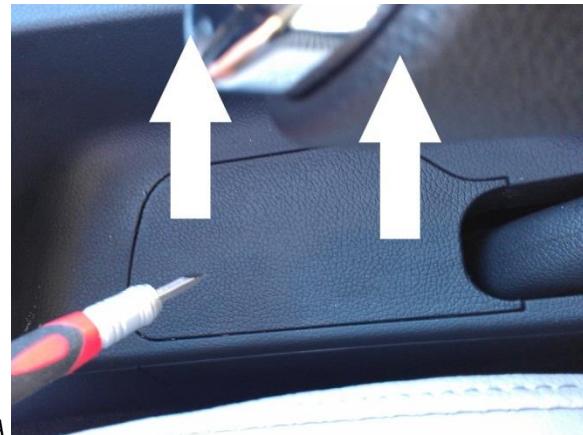

-Unplug the connector to the left of the shifter (automatic only) (E) and remove entire center console from vehicle (F).

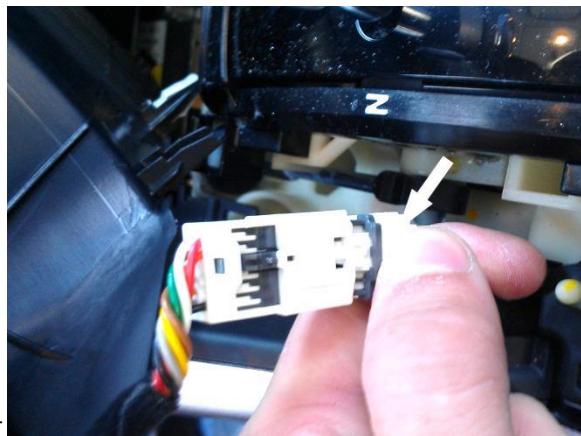

E



F

-MANUAL TRANSMISSION ONLY – AUTOMATIC TRANSMISSION MOVE TO INSTALLATION INSTRUCTIONS – We need to remove the AUX/USB/Power Outlet port in the center console (G). To do that we need to remove the silver hand holds/side pieces (right side highlighted in H). Remove one plastic Phillips head screw on each side (arrow in H, I). Next remove 4 Phillips screws (J). Grab onto silver handles and carefully wiggle and pull entire assembly backwards and up. Now we can get to the AUX/USB/Power Outlet port. Using a hooked plastic pry tool is best, position under the piece and pull straight backwards (K). It may also help to put your fingers in the power outlets and carefully pull backwards or wiggle side to side. It pulls straight back and is clipped in with the clips pictured (L). Unplug and remove AUX/USB/Power Outlet and move to Installation Instructions.




G



H




I

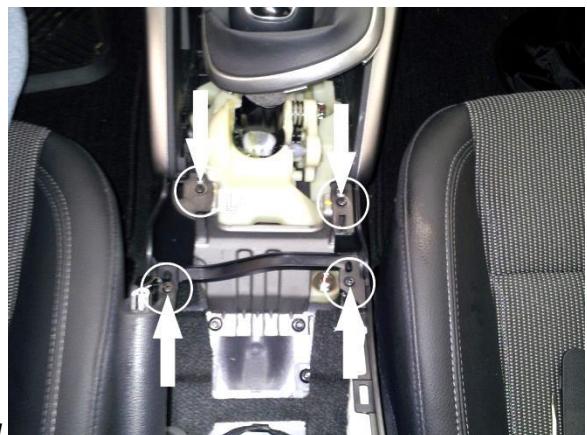

J



K

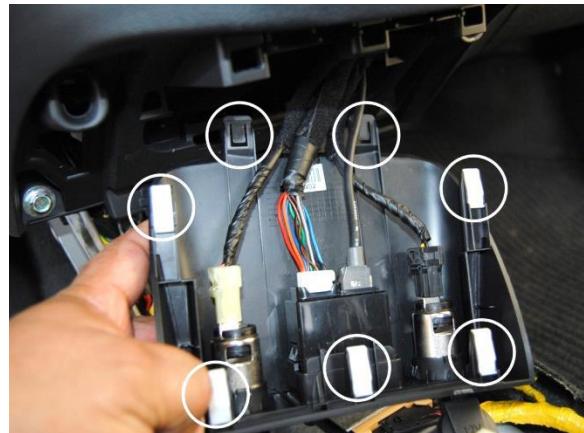

L

Installation:

-First thoroughly clean inside each cup holder with an alcohol pad or Windex (this step is important for quality of adhesive). Drill a 3/16" hole from the top of the center console slightly off center in each cup holder (M). Now run your wires through the holes starting at the top and remove the covering from the double-sided tape on the back of each cupholder disc. Carefully heating up the adhesive if possible will help Center each disc and then press down firmly to secure each disc (do not remove disc once firmly pushed down) (N).




M




N


-AUTOMATIC TRANSMISSION: Run the LED wires down the center console piece to the plug next to the shifter (O) securing with zip ties. The wires we need are in the white plug (circled in O). Take a razor blade and peel back the black fuzzy covering from the wires if necessary. We need the **BLACK (-)** wire on the end of the white plug and the **ORANGE (+) (may be BLUE depending on model year)** wire in the same row (P). (Alternate wire attachment methods can be used) Make sure your key is off. Now use wire strippers to side-strip both the black wire and the orange wire in the white plug (Q). Strip back the LED wires, and then poke a hole through the center of both the black and orange car wires. Take both black LED wires and twist them together and run them through the **BLACK** car wire and wrap it around. Tape up the connection and zip tie to secure. Do the same with the red LED wires attaching to the **ORANGE or BLUE** car wire. Ensure all connections are taped up and secure with zip ties (R).

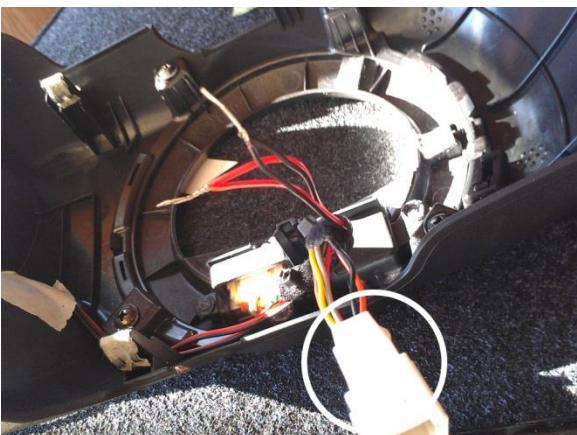


O

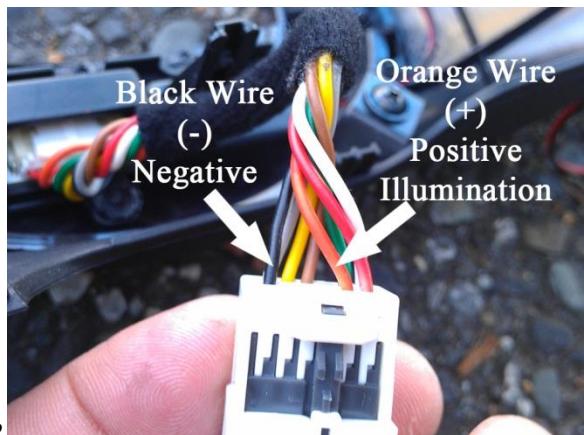

P

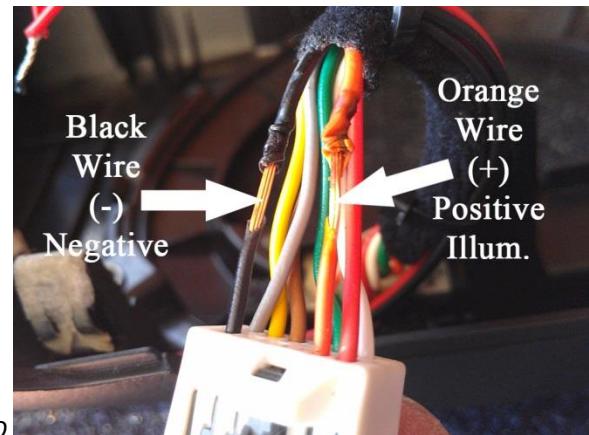


Q

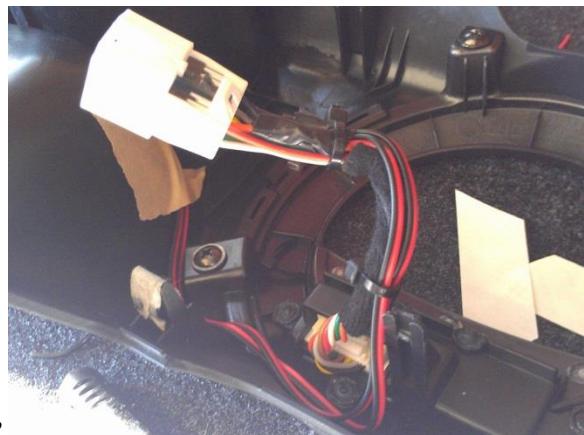


R

-MANUAL TRANSMISSION: Place center console back into vehicle and run wires up to the AUX/USB/Power Port plugs. The wires we need are in the white 12-pin AUX plug (S). Take a razor blade and peel back the black tape covering from the wires if necessary. We need the **BLACK (-)** wire on the end of the white plug and the **PINK or BLUE (+)** (2012 Pink, 2013+Blue) wire directly below (T). (Alternate wire attachment methods can be used) Make sure your key is off. Now use wire strippers to side-strip both the black wire and the Pink or Blue wire in the white plug. Strip back the LED wires, and then poke a hole through the center of both the black and Pink or Blue car wires. Take both black LED wires and twist them together and run them through the **BLACK** car wire and wrap it around. Tape up the connection and zip tie to secure. Do the same with the red LED wires attaching to the **PINK OR BLUE** car wire (DISCLAIMER: A 1-3amp fuse is suggested in line with the red LED wires). Ensure all connections are taped up and secure with zip ties.

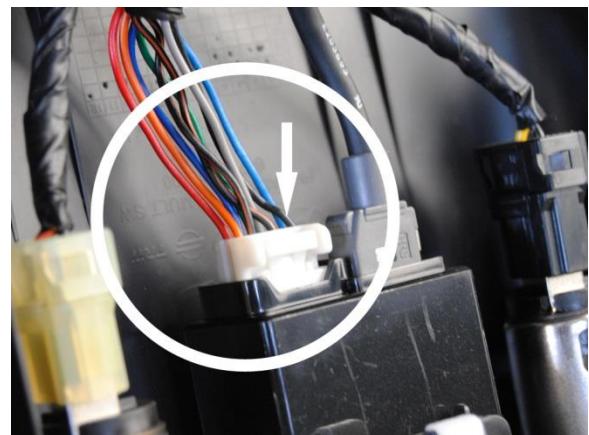

S

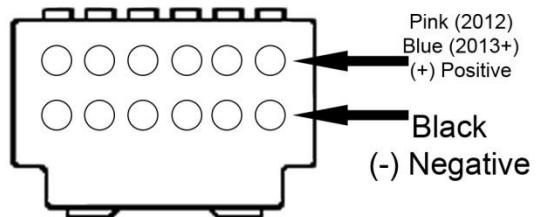

T

-You're all done! Turn on your headlights to test the LEDs. Put everything back together and you're set! The remainder of the reinstall is the opposite of uninstall!



Please contact us directly if you have any installation questions or comments about the product. Thank you!

©AccentGlowLED™ 2016